

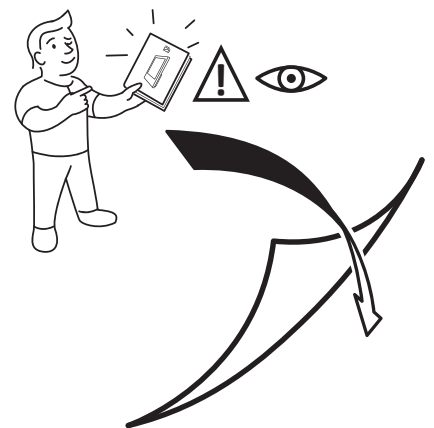
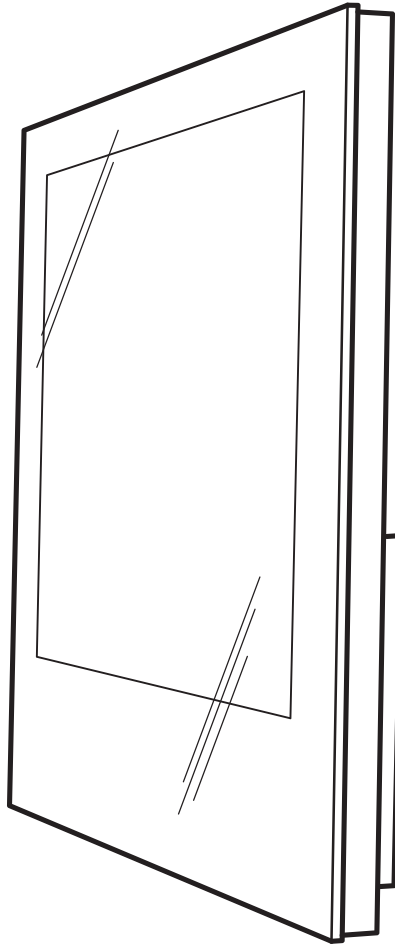
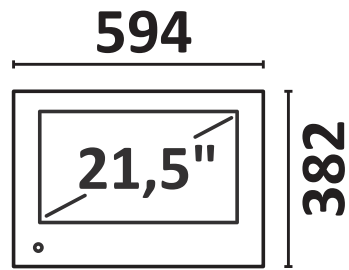
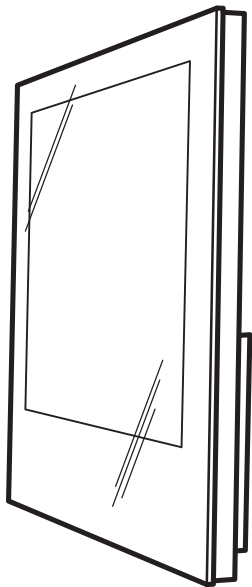


MIRALAY

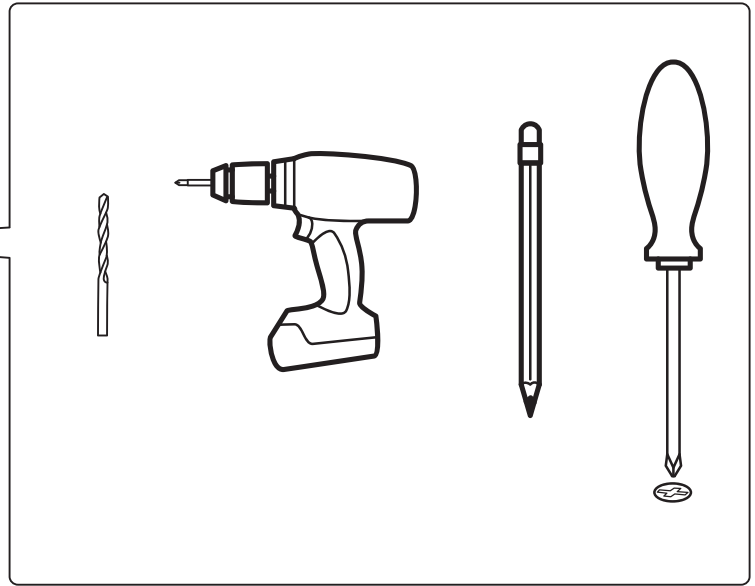



# MIRALAY

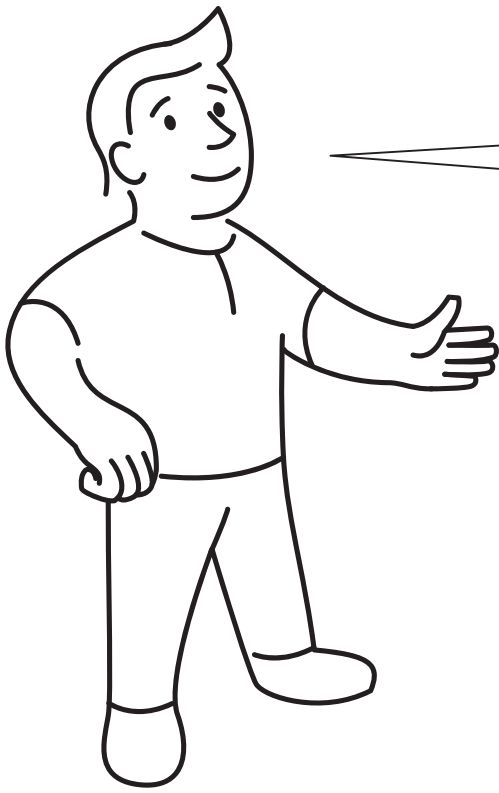

**A**





**B**

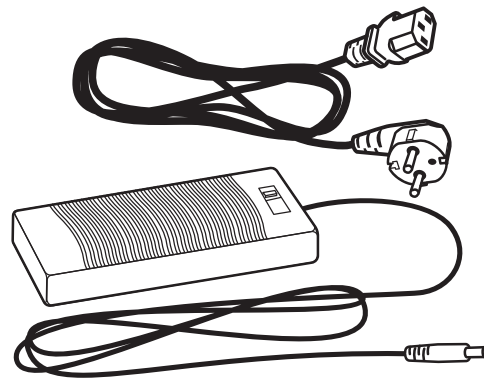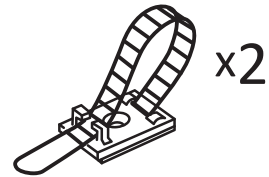


# MIRALAY



1

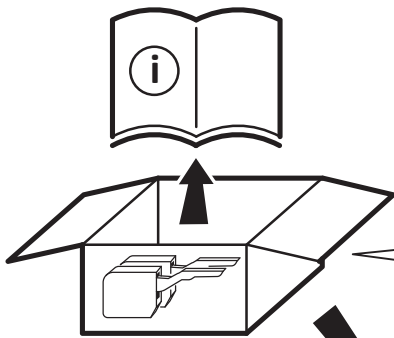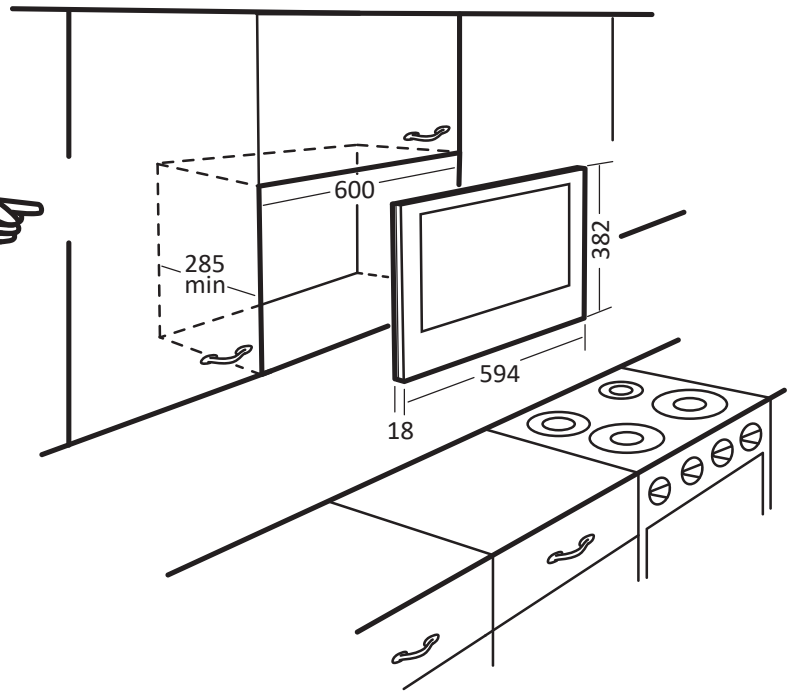

A

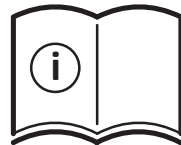


B



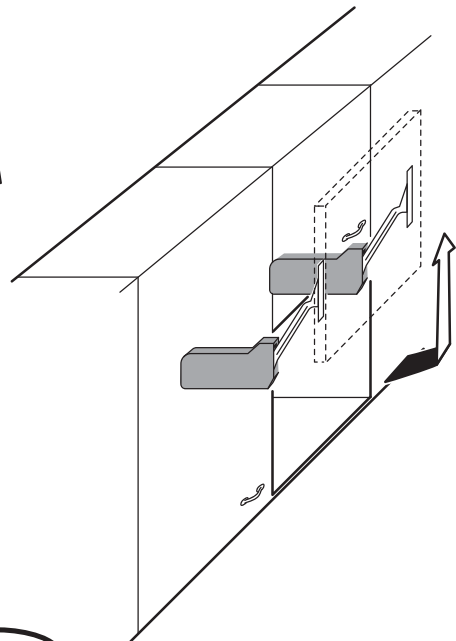
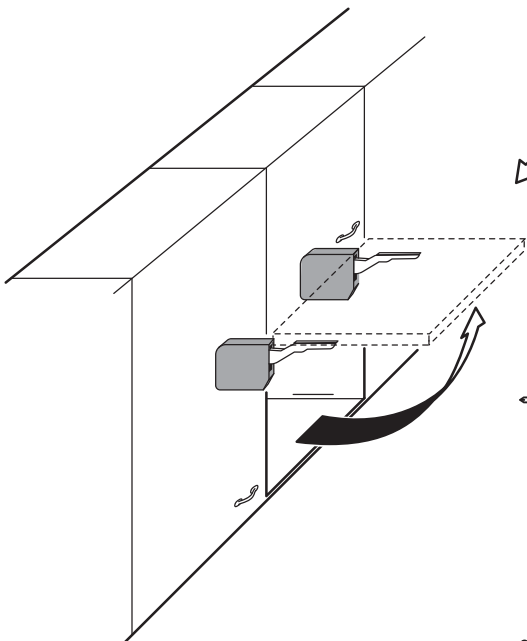


Blum Aventos HK27  
Kessebohmer FREEflap forte-E  
Hafele Free Flap 3.15 E

Blum Aventos HL27/35  
Kessebohmer FREEslide Q3us  
Hafele Free Up Q3us

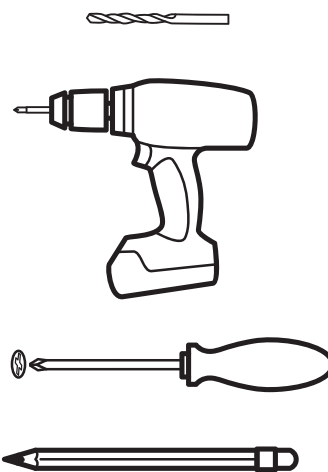






# MIRALAY

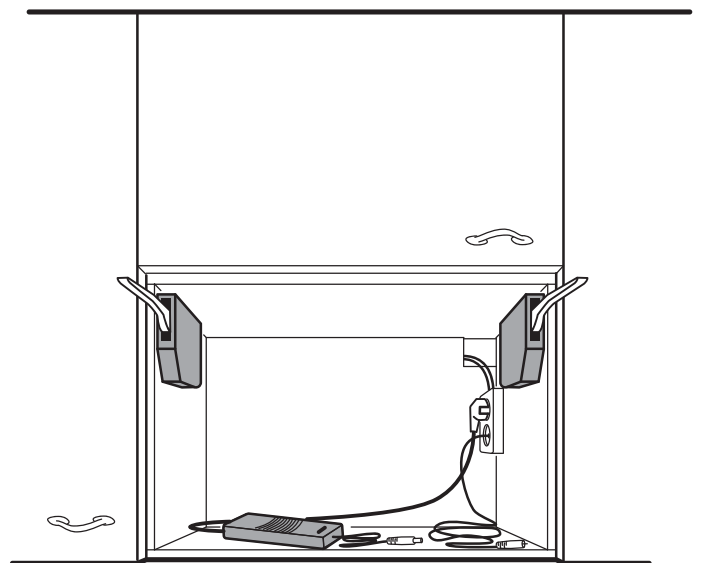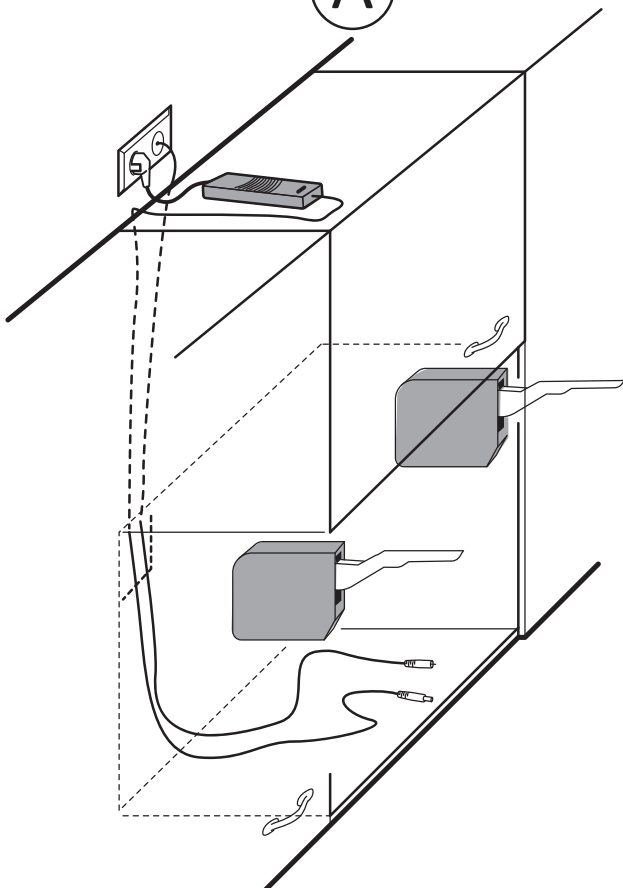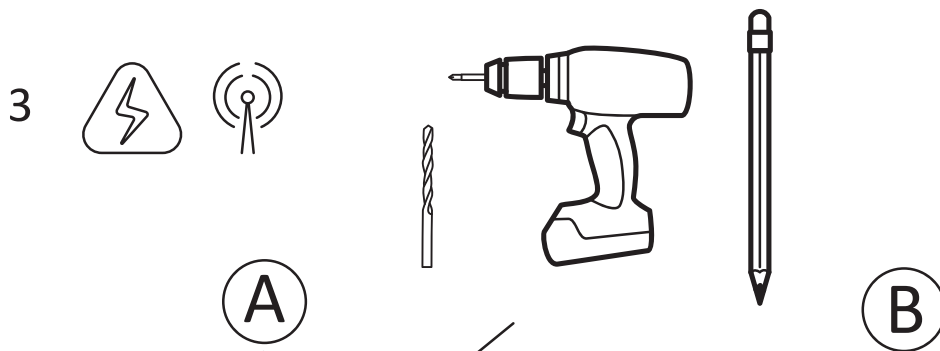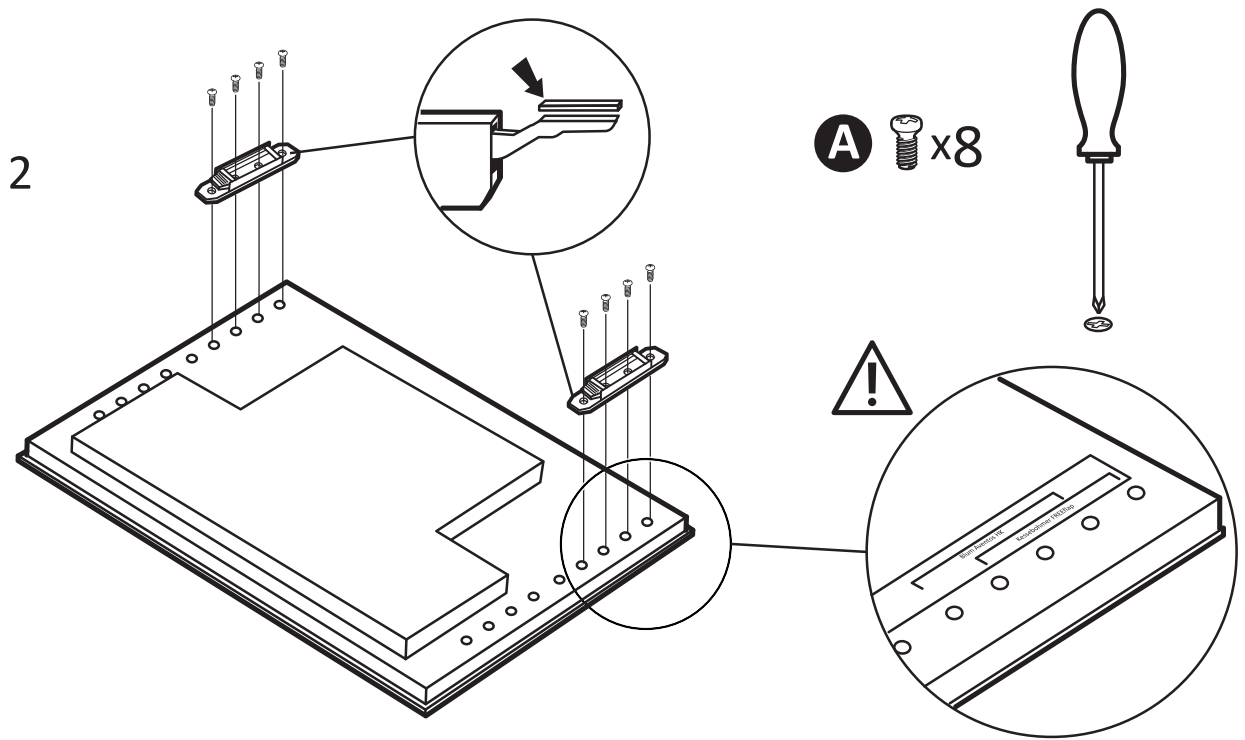



# MIRALAY

4

**B**

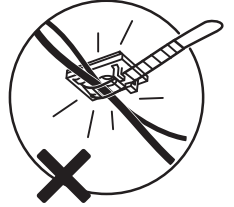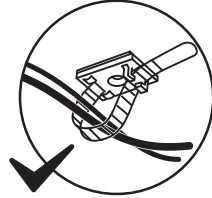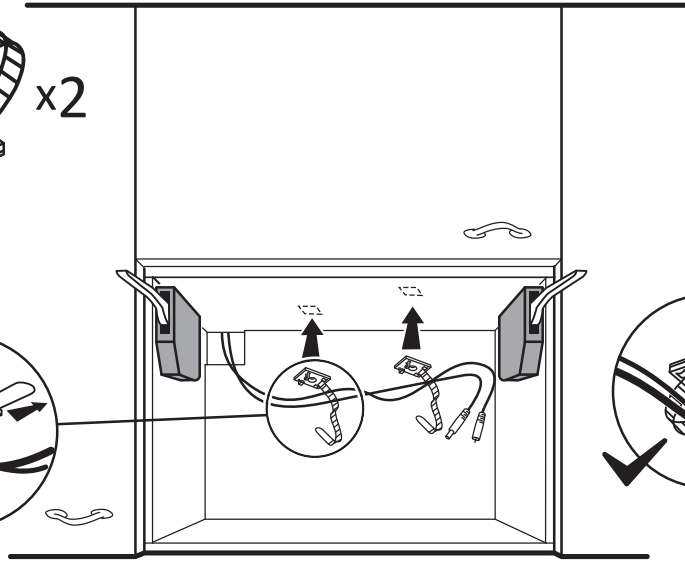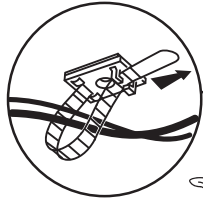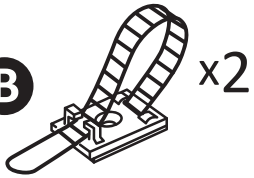


5

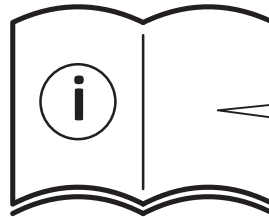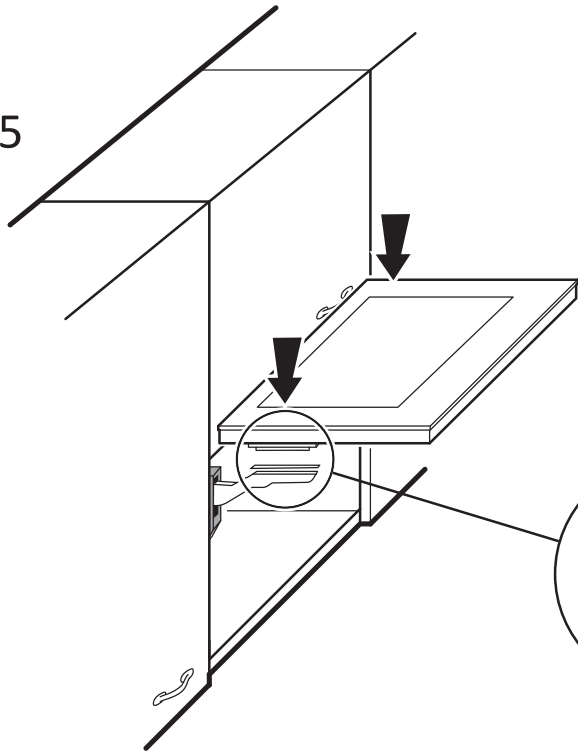



**blum**

**HÄFELE**

**KESSEBÖHMER**

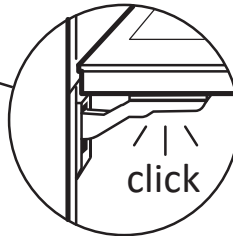


6

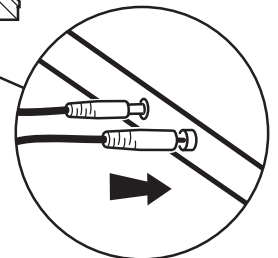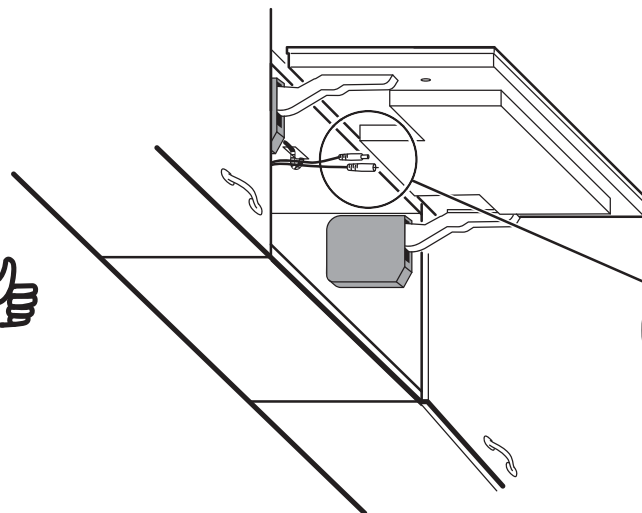

# MIRALAY

A

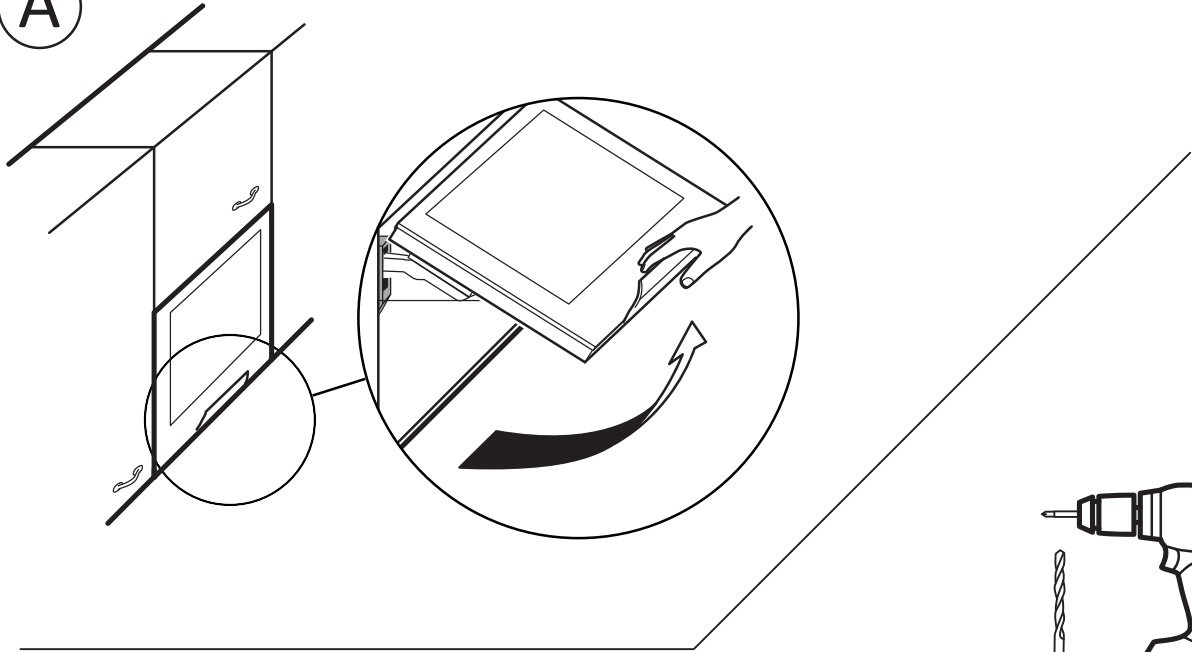

B

